

POWERFLEX®

PART NUMBER

PFF5-5303

DESCRIPTION

FRONT WISHBONE REAR BUSH, ALUMINIUM OUTER CASTER OFFSET

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Steel Shells
2 x Zinc Plated Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. With the wishbone still fitted to the vehicle, lower the rear bush/bracket assembly and remove it from the end of the wishbone. This can be done using a puller or other means.
2. Remove the original bush from the bracket including its outer shell.
3. Clean any dirt and corrosion from the bracket and the pin on the wishbone with some emery cloth, removing any sharp edges or burrs with a rounded file.
4. Press the aluminium shell into the bracket, on the opposite side with the pip on the bracket and press until it seats fully against the bracket. Make note of the correct hole orientation before fitting. The offset hole should fit nearest to the mounting tab of the bracket (Figure 2).
5. Place the supplied washer onto the pin of the wishbone and slide on the inner polyurethane bush.
6. Apply some of the supplied grease to the outer body of the polyurethane bush and the bore of the shell.
7. Present the bracket with the outer shell to the bush on the wishbone and mate the parts until the polyurethane bush is flush within the aluminium outer shell and pushed onto the wishbone fully.
8. Refit the bracket to the vehicle and tension all hardware to the manufacturer's recommended torque settings.

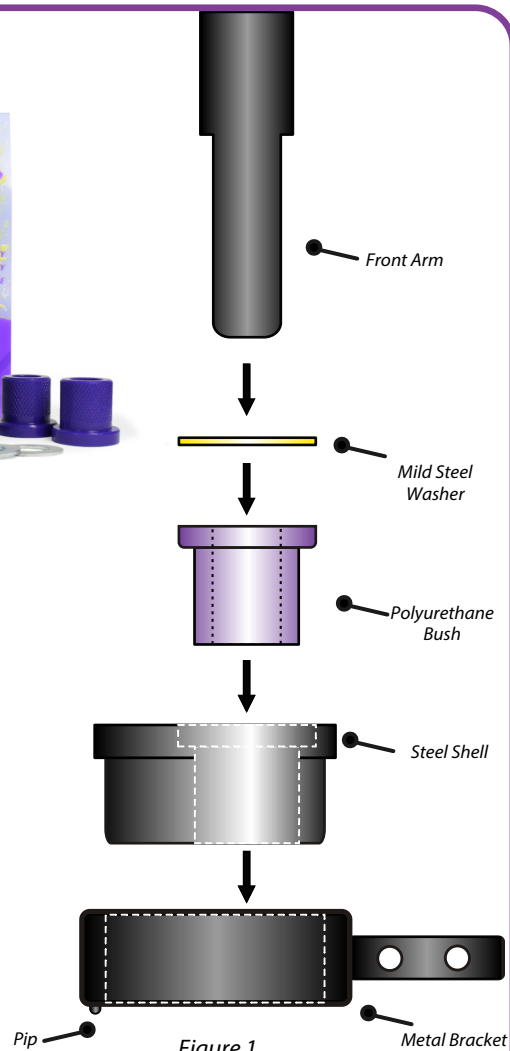


Figure 1

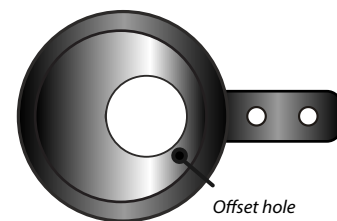


Figure 2

