

POWERFLEX®

PART NUMBER

PFF5-6004

DESCRIPTION

FRONT UPPER WISHBONE BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease
4 x Stainless Steel Sleeves 4 x Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove OEM wishbone from car and remove original bush from the wishbone.
2. Clean the bore of the wishbone, and remove any burrs and sharp edges.
3. Press the Powerflex bushes into the wishbone in the orientation shown in Figure 1.
4. Apply some of the supplied grease to the bore of the bush and press the steel sleeves into the bushing, ensuring the ends are flush to the bushing.
5. Place a washer on the inside end of the bush as illustrated in Figure 1.
6. Refit wishbone to car and tension all hardware to manufacturers recommended torque settings.

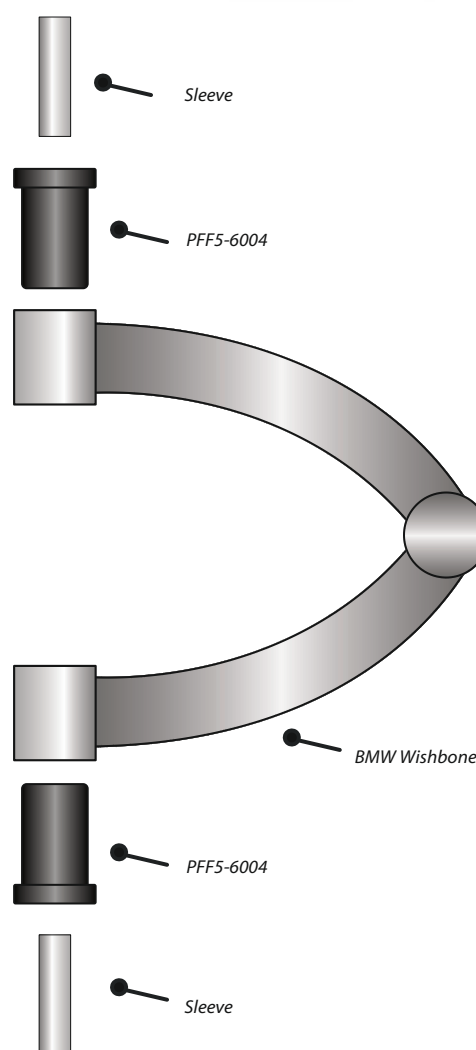


Figure 1