

# POWERFLEX®

## PART NUMBER

# PFR5-6031

## DESCRIPTION

## REAR DIFF REAR MOUNTING BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

1 x Polyurethane A Bush	1 x Polyurethane B Bush
1 x Stainless Steel Sleeve	1 x PTFE/Silicone Grease
1 x Anodised Black Washer A	1 x Anodised Black Washer B

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original bush and clean away any dirt and corrosion, remembering to also file away any sharp edges.
2. Insert the A part front bush into the bore of the subframe facing the front of the car, towards the diff. Insert the B part rear bush into the bore of the subframe facing the rear of the car, away from the diff.
3. Apply some of the supplied grease to the outer surface of the stainless steel sleeve and insert it into the bore of the polyurethane bushes, ensuring it sits flush within the bore.
4. Fit the A part (thinner) washer against the A part bush facing the front of the car, towards the diff. Fit the B part (thicker) washer against the B part bush facing the rear of the car, away from the diff.
5. Refit the subframe, remembering to tension all hardware to manufacturer's recommended torque settings.

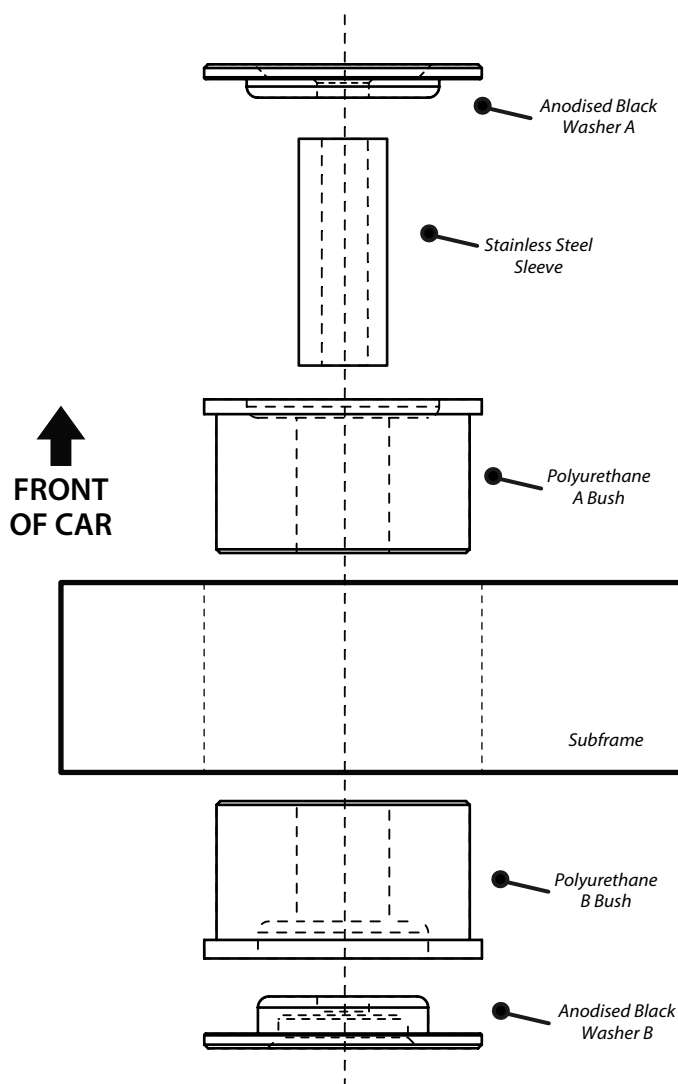


Figure 1